


## Test values

Idle speed rpm	750 ± 50
----------------	----------

## Special tools

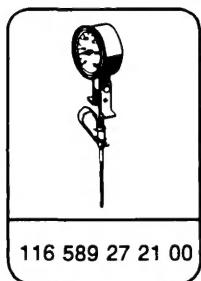

## Commercial tool

Tachometer
------------

Connect tachometer and oil telethermometer.


Switch off climate control, move selector lever to "P".

Check whether throttle valve lever rests against idle speed stop.

Adjust cruise control (tempomat). Check whether actuating element rests against idle speed stop of cruise control (tempomat). To check, disconnect pull rod (21) and push lever of actuating element clockwise against idle speed stop.

When engaging pull rod (21), make sure that the lever of the actuating element is pushed away from idle speed stop by approx. 1 mm. Readjust pull rod, if required.

Run engine to 75-85°C oil temperature.

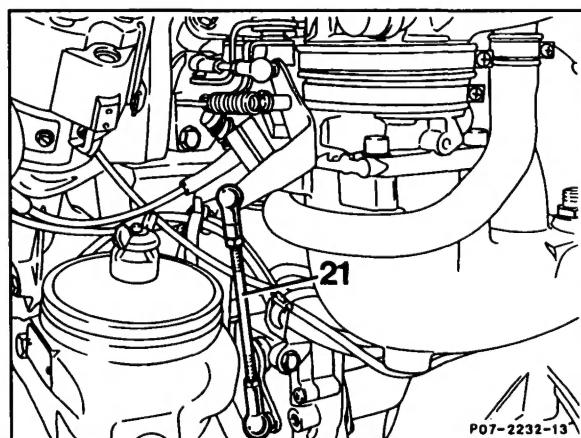

Check idle speed and set to specified speed, if required, by means of idle speed air screw (10).

